TMP NO. 93739_A	PAGE 1 OF 1	REV. A	**Always consult dormakaba's website for the latest templates at https://dhwsupport.dormakaba.com/hc/en-us or call 1-800-392-5209.**

NOTES:

1. BEFORE DRILLING, CHECK THE TEMPLATE—INSTALLATION TEMPLATE FOR MORTISE LOCKS AND ELECTRIFIED MORTISE LOCKS (T93738).
2. THE MAXIMUM DOOR-TO-FRAME GAP IS 3/16" [4].
3. ALLOW 3/64" [1] CLEARANCE FOR THE DUST BOX THICKNESS.
4. FOR METAL DOORS, LOCK CASE SUPPORT IS REQUIRED FROM THE DOOR MANUFACTURER.
5. TAP FOR A #12-24 MACHINE SCREW OR DRILL FOR A #12 WOOD SCREW (A COMBINATION SCREW IS SUPPLIED).
6. LOCK CASE HOLES:

Ⓒ CYLINDER HOLE— 1–1/4" [32] DIA.

Ⓕ EMERGENCY KEY / THUMB TURN ACCESS HOLE—1/2" [13] DIA.

Ⓖ TRIM MOUNTING HOLE 3/8" [10] DIA. (TWO REQUIRED)

Ⓗ LEVER HOLE —7/8" [23] DIA.

NOTES:

BACKSET: 2–3/4" [70]

DOOR THICKNESS: 1–3/4 [44] – 4" [101]

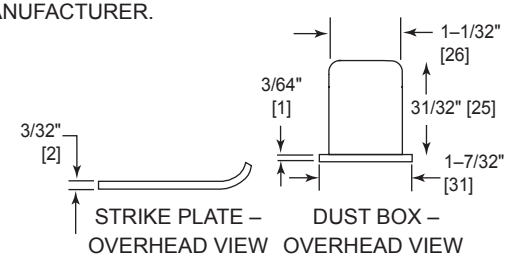

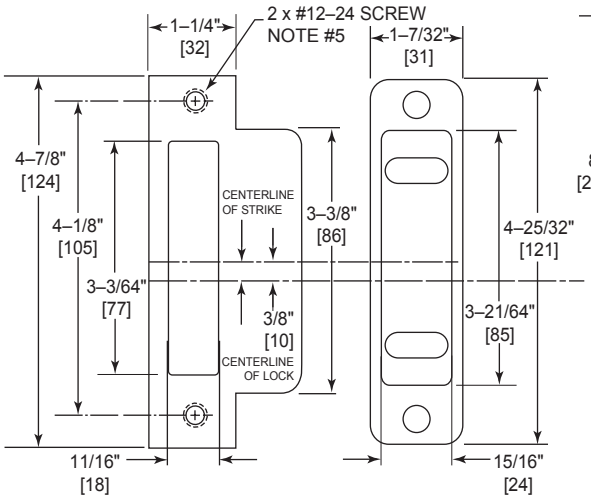

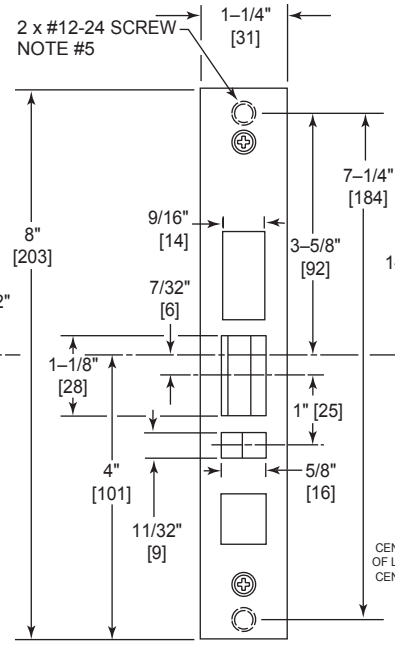

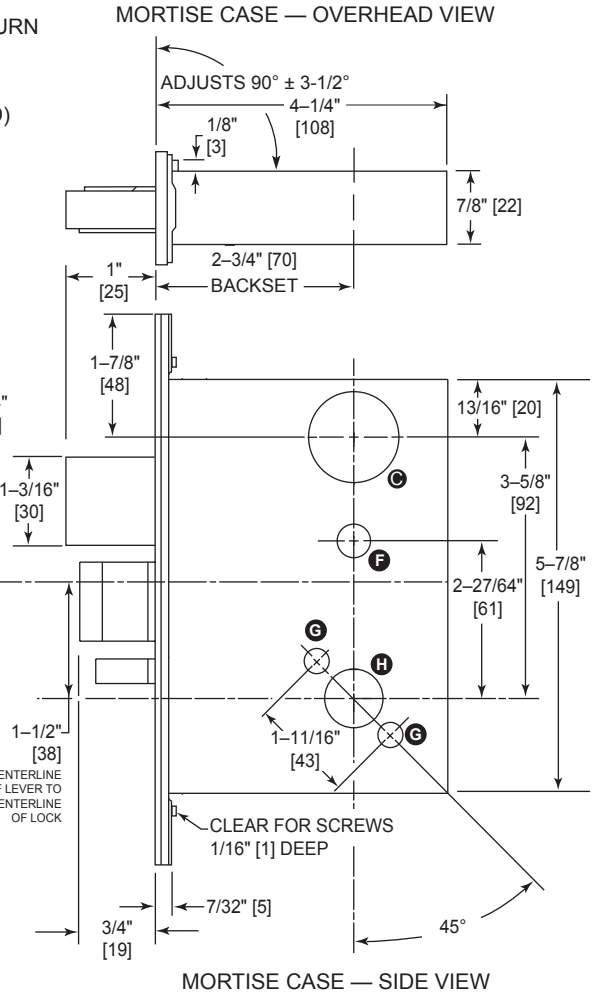

NOT TO SCALE. MEASUREMENTS ARE FOR REFERENCE ONLY. NOT A DRILLING TEMPLATE.

M1000 MORTISE LOCKS FOR LOCKSET
TRIM STYLES A, B, D, H, M

dormakaba